

Guide de configuration

CONFIGURATOR	CONFIGURABLE PRODUCTS
<p>TxConfig USB Configurator software + USB interface 8816021039</p> 	<p>TxBlock without USB, RHT 4-20 and 0-10 Temp-WM TxRail, TxIsoRail, old TxIsoBlock TxMiniBlock</p>
<p>TxConfig-HRT HRT Configurator Modem + USB interface 8816021059</p> 	<p>TxIsoPack-HRT TxIsoRail-HRT NP800H NP860</p>
<p>TxConfig Pack Configurator software + USB Micro B plug cable 8807000099</p> 	<p>TxIsoPack</p>
<p>TxConfig-USB NP Configurator software + USB Interface (Pressure) 8816021049</p> 	<p>NP300</p>
<p>TxConfig DIN43650 Configurator software + USB interface (Pressure) 8816021069</p> 	<p>NP-600 NP-620 TxMini-DIN43650</p>
<p>TxConfig II Configurator Software + USB Micro B plug cable 8806000420</p> 	<p>TxBlock-USB TxRail-USB</p>
<p>TxConfig-USB-M12 Configurator software + USB interface 8816021079</p> 	<p>TxMini-M12</p>
<p>NConfig Software 8845000130</p> 	<p>N1540 N3000 N1040 N960 N1200 N480D N1100 N120 N1020 N1540TOT N1040i N1200HC N2000 N1040T</p>
<p>Optical Interface - Link3 USB + software 8813099050</p> 	<p>LogBox-DA LogBox-AA LogBox-RHT-LCD</p>
<p>LogChart II Software No need of interface</p> 	<p>TagTemp Stick TagTemp-USB N120-DL</p>
<p>NFC-USB Interface 8813099080</p> 	<p>TagTemp-NFC Thermo boxes</p>
<p>LogChart-NFC ANDROID app</p> 	<p>TagTemp-NFC</p>
<p>DigiConfig</p> 	<p>DigiGate Profibus DigiRail-VA AirGate-Modbus DigiRail-2A AirGate-GPRS DigiRail-2R RHT-Modbus DigiRail-4C RHT-Air</p>
<p>TxDroid Config OTG Cable + Micro USB Cable</p> 	<p>TxBlock-USB</p>
<p>FieldLogger Configurator Included in FieldChart software</p> 	<p>FieldLogger</p>